

KEEP IT CLEAN | KEEP IT SAFE

Security has always been one of our top priorities with our devices, but now we're all facing a different type of threat. The following guidelines may be used to clean your Canon devices including: imageRUNNER ADVANCE, imagePRESS, imageCLASS, LASER CLASS, varioPRINT 140/135 Series, VarioPrint 6000 Series, imagePROGRAF Series, and imageFORMULA Scanners.

BEFORE CLEANING



Unplug & turn off device



Avoid bleach, ammonia, and harsh cleaning solvents



Don't place liquids directly on your device



For everyone's safety keep your device dry!

CLEANING TOOLS



Disposable lint-free cloth



70%+ Ethanol or isopropyl alcohol




Glass cleaner



Disposable gloves

TIPS FOR CLEANING

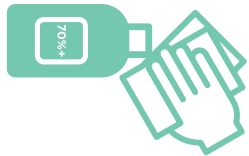

Moisten cloth & wipe screen/panels



Dispose of cloth after one use



Don't use commercial wet wipes



Use glass cleaner on platen glass

KEEP YOURSELF AND OTHERS SAFE



Wear disposable gloves



Wear a face mask



Never use alcohol near fire



See touchless operation tips



FIND OUT MORE AT
[CANON.CA/KEEPITCLEAN](https://www.canon.ca/keepitclean)

This recommended cleaning procedure cannot guarantee the elimination of the virus that causes COVID-19 from Canon scanner and printer products. Be cautious in the storage and use of the alcohol, including following all product instructions and warnings.

Canon, imageRUNNER, imagePRESS, imageCLASS, varioPRINT, imagePROGRAF, and imageFORMULA are registered trademarks of Canon Inc. in Canada and may be a registered trademark or trademark in other countries. © 2020 Canon Canada Inc. All rights reserved.

Canon